



Ingersoll Rand Flow Meter Interface Box User Manual



Before installing or starting this unit for the first time, this manual should be studied carefully to obtain a working knowledge of the unit and or the duties to be performed while operating and maintaining the unit. RETAIN THIS MANUAL WITH UNIT. This Technical manual contains IMPORTANT SAFETY DATA and should be kept with the unit at all times.

C.C.N. : 49112543
REV. : A
DATE : April 2015

TABLE OF CONTENTS

1 - INTRODUCTION	3
2 - PC CONNECTION	3
3 - FIELD OPERATION.....	3
4 - M12 CONNECTOR	4
5 - POWER SUPPLY	4
6 - RS485 CONVERTER	4
7 - SPARE PARTS.....	4

1 - INTRODUCTION

The CCN 49099252 package contains 3 items :

1. The Airscout Junction box, with M12 (5-pin) connector and 4..20mA connection
2. A RS485 to USB converter
3. A 12VDC power supply

The Airscout interface box combines all the signals into one box and makes the Airscout outputs available.



2 - PC CONNECTION

The Airscout interface box is used for easy connection to the computer. The connection is used to program the Airscout or to read out the sessions that are stored in the sensors built-in data logger.

- Connect the power supply to the power source
 - Connect the RS485 converter to your computer
 - Check if the driver is installed automatically, if not install the driver manually
- Connect the Airscout, power supply and RS485 converter to the interface box

3 - FIELD OPERATION

The Airscouts 4..20 mA signal is made available for logging purposes and can be connected to any 4..20 mA data logger or building management system. The signal is an active 4..20 mA output.


- Connect the Airscout and power supply to the interface box.
- Connect the power supply to the power source.
- 4..20mA signal will be available once the gray wire(s) are connected to the readout display source.
- The default parameters for the 4..20 mA output are m/sec and min/max velocity.

Pin	Signal	Wire Color
1	4..20 mA +	Yellow
2	4..20 mA -	Green

NOTE


The Interface Box has a 4..20MA positive and negative wires for additional connectivity. The positive 4..20mA is yellow and the negative 4..20mA is green. Connection to an X-Series I/O box requires use of only the green 4..20mA negative wire. If used with an I/O box the yellow wire should be covered.

Connection scheme

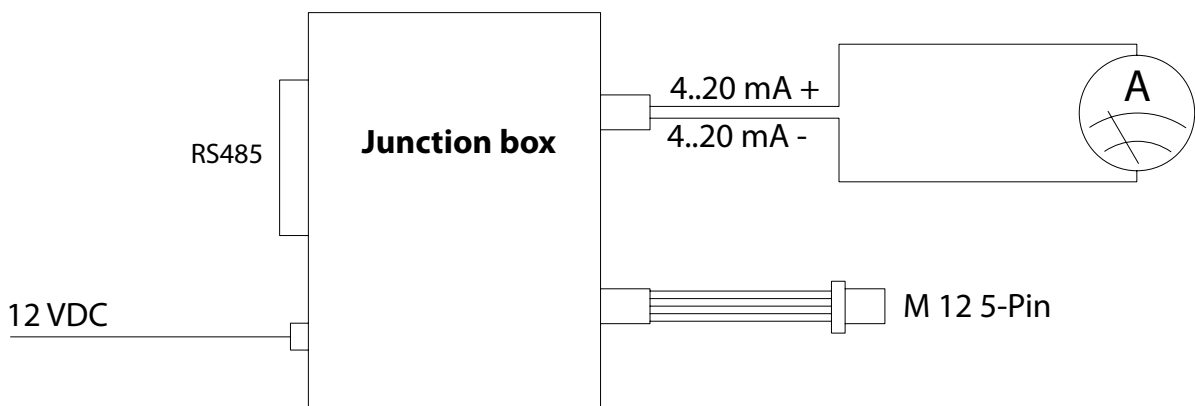

4 - M12 CONNECTOR

Pin	Signal	Wire Color
1	+ 12...24 VDC	Brown
2	0 Volt	White
3	4..20 mA Signal, Active	Blue
4	RS485 A	Grey
5	RS485 B	Black

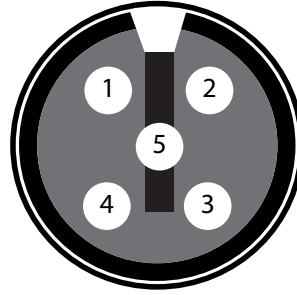

5 - POWER SUPPLY

A class 2 power supply must be used to power the Airscout.

In	100-240 VAC, 50-60 Hz, 300 mA
Out	12 VDC / 1A

6 - RS485 CONVERTER

The converter is used to get the RS485 signal into the computer. When the converter is connected, a driver needs to be installed. Installation might be done automatically by the operating system. If not, then install the driver manually via device manager.

Once the driver is properly installed, a COM port will be available.

7 - SPARE PARTS

CCN	Description
49099245	Power Supply 12V 5-Pin
23132913	USB to RS-485 Converter
23808967	Flow Meter Connector cable M12 (5-Pin)



A series of horizontal lines spanning the width of the page, providing a template for writing. The lines are evenly spaced and extend from the left margin to the right edge of the page.



A series of horizontal lines for writing, spanning the width of the page. The lines are evenly spaced and extend from the left margin to the right edge of the page.



A series of horizontal lines for writing, spanning the width of the page. The lines are evenly spaced and extend from the left margin to the right edge of the page.

